
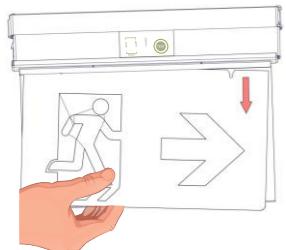
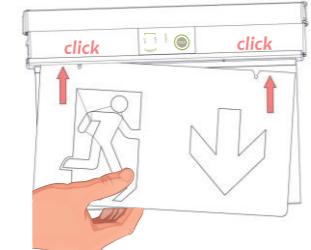


Legend installation-replacement
KLD-22/ST/ADR & KLD-30/ST/ADR


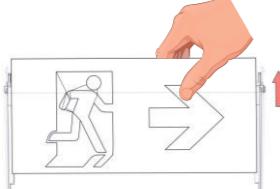
1

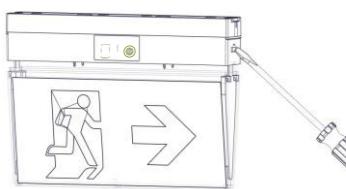


2

KLR-20/ST/ADR


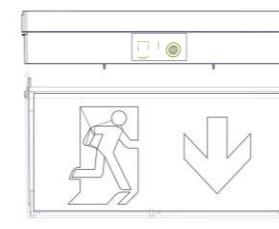
1



2

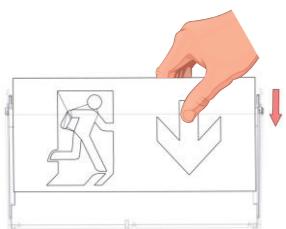

3



4

**Accessories for installation
(After request)**

- A-2130: Accessory for ceiling (1m)
- A-2131: Accessory for ceiling (0,5m)
- A-2132: Accessory for ceiling (0,25m)
- A-2133: Accessory for wall mounting
- A-2136: Accessory for hanging installation (2,5m)
- A-2520/PL/ST: Suspended ceiling base

Battery replacement

1. Disassemble the luminary.
2. Remove the battery connector and carefully remove the battery from its base.
3. Install a new battery of the same type and rating.
4. Assemble the luminary and power the device.

NOTE: LED= Light Emitting Diode
LABELING EXPLANATION:

X: Self contained

1: Maintained (*)

A: Including test device

B: Including remote test mode

C: Including inhibiting mode

E: With non-replaceable lamp(s) and/or battery

F: Automatic test gear complying with IEC 61347-2-7 denoted EL-T

G: Internally illuminated safety sign

60: 1 hour duration

180: 3 hours duration

480: 8 hours duration

X | A B C E F G | 1 8 0

(*) Maintained operation: The luminary lights its illumination source, when it is powered by the mains power supply or not.

Non Maintained operation: The luminary lights its illumination source, only in mains power supply's failure.

ATTENTION!!!

 The light source of this luminary is not replaceable when the light source reaches its end of life the whole luminary shall be replaced.

Technical Characteristics

	KLD-30/ST/ADR	KLD-22/ST/ADR	KLR-20/ST/ADR
OPERATION VOLTAGE	220-240V AC / 50-60Hz	3.9W / 4.4VA	
MAXIMUM POWER CONSUMPTION		20mA	
SUPPLY CURRENT		70V	
U-OUT		1.5W	
Prated		130mA	
Irated		39V DC	
MAX OPEN CIRCUIT VOLTAGE		1h: 3.4, 3h: 1.4, 8h: 0.2	
EMERGENCY OUTPUT FACTOR (EoFx)		0.08mm ² - 1.5mm ²	
WIRE CROSS SECTION		0.87	
MINIMUM POWER FACTOR		3.6V/1.5Ah	
BATTERY (Ni-MH)		Basic insulation	
INSULATION BETWEEN SUPPLY & CONTROL TERMINALS		Basic insulation	
INSULATION BETWEEN SUPPLY & BATTERY CIRCUIT		Deep discharge and overcharge protection / the control gear will recharge the battery normally after the test of 22.3	
BATTERY PROTECTION		3 - 4.5V	
MIN MAX. DISCHARGE VOLTAGE		1h (400-690mA), 3h (190-295mA), 8h (55-95mA)	
MIN MAX. DISCHARGE CURRENT		20 - 120mA	
MIN MAX. CHARGE CURRENT		4.4V / 40mA	
TRICKLE CHARGE VOLTAGE/CURRENT		4.9V	
MAX CHARGE VOLTAGE		LED Charge, Lamp Fault LED, Battery Fault LED / Test Button	
INDICATIONS		24 hours	
CHARGE TIME		1h / 3h / 8h Manually Selected (Default 3h)	
MINIMUM DURATION		LED / CONSTANT CURRENT	
LIGHT SOURCE / OUTPUT MODE		80lm / 1h: 250lm, 3h: 110lm, 8h: 15lm	
LIGHT SOURCE LUMINOUS FLUX (MAINS / EMERGENCY)		IP54	
DEGREES OF COVER PROTECTION		EN 60598-1, EN 60598-2-22, EN 55015, EN 61547, EN 61000-3-2, EN 61000-3-3	
PRODUCED IN ACCORDANCE WITH		5 to 40 °C	
OPERATION TEMPERATURE RANGE		58 °C at BR1	
CONTROL GEAR MAX.TEMPERATURE: tc		Up to 95%	
RELATIVE HUMIDITY		PC, Acrylic Plate	PC
CONSTRUCTION MATERIAL	310x35x216mm	260x35x180mm	260x35x170mm
EXTERNAL DIMENSION (L x W x H)	955gr.	740gr.	560gr.
WEIGHT	3 years (1 year for the battery)		
GUARANTEE			
CONTROL GEAR WITH AUTOMATIC TEST FUNCTION		EL-T	

LED Characteristics

	KLD-30/ST/ADR	KLD-22/ST/ADR	KLR-20/ST/ADR
MANUFACTURER	Olympia Electronics S.A.		
MODEL NUMBER	2711195		
VOLTAGE RANGE	11.2-13.2V DC		
NOMINAL POWER	0.72		
CONNECTIONS	Built-in main board		
TEMPERATURE	45 °C max. across the board		

Warranty

Olympia Electronics guarantees the quality, condition and operation of the goods. The period of warranty is specified in the official catalogue of Olympia Electronics and also in the technical leaflet, which accompanies each product. This warranty ceases to exist if the buyer does not follow the technical instructions included in official documents given by Olympia Electronics or if the buyer modifies the goods provided or has any repairs or re-setting done by a third party, unless Olympia Electronics has fully agreed to them in writing. Products that have been damaged can be returned to the premises of our company for repair or replacement, as long as the warranty period is valid.

Olympia Electronics reserves the right to repair or to replace the returned goods and to or not charge the buyer depending on the reason of defect. Olympia Electronics reserves the right to charge or not the buyer the transportation cost.



72nd km. O.N.R. Thessaloniki-Katerini
 P.C. 60300 P.O. Box 06 Eginio Pierias Greece
www.olympia-electronics.com
info@olympia-electronics.gr



European manufacturers


KLD-22/ST/ADR

KLD-30/ST/ADR

KLR-20/ST/ADR
KLD-30/ST/ADR, KLD-22/ST/ADR & KLR-20/ST/ADR
ADDRESSABLE SELF TESTING MAINTAINED EMERGENCY ILLUMINATION SIGNS

 Thank you for your trust in our products
Olympia Electronics - European manufacturer

Package contents


- 1 Luminaire
- 1 Wall mounting accessories
- 1 Ceiling mounting accessories
- 1 Manual
- 1 Set of Pictograms

General

These luminaires are used indoors (ta 40°C) where emergency light is needed. Each luminaire must be permanently connected to mains power supply. In normal operation the led strip lights and the battery is charging. In case of a mains power supply failure the luminaire will light the led strip automatically in emergency mode (powered by its battery). When the mains power supply is restored the device turns to normal operation.

Manual test for emergency operation and light source.

The manual test can be conducted only if the mains power supply and the battery is connected:

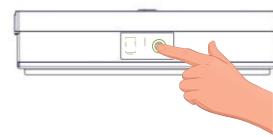

During the Test the lamp fault LED blinks.

Manual Autonomy Test

A duration test can be conducted if the TEST button is pressed from 5 to 10 seconds. The luminaire enters emergency mode, the charge LED is turned OFF and the Battery Fault led starts to blink. The test is conducted until the battery is depleted. If at the end of the test the autonomy is low then the Battery Fault LED will be ON. If the result of the test is good then the luminaire enters charging mode and the Charge led starts to blink until the batteries are fully charged.

Automatic Operational Test

This test includes all the operations that provide the manual test and is conducted automatically every 15 days. In order to be performed, the mains power supply and the battery should be connected.

Automatic Autonomy Test

The Automatic Autonomy Test is conducted every 6 months and measures the device's back up operation and emergency duration. This test includes all functions of the Manual Autonomy Test.

Resetting errors

Push the test button for more than 10 seconds, to delete all the LED indicated errors. Then the device enters regular operation mode.

Addressable Communication

The luminaire has the ability to be connected to GR-6500 panel. In order to do so, the luminaire's address has to be unique in the same bus. For more information, see the extra brochure.

ATTENTION!!!

- Operations for installation, maintenance or testing must be done by authorized personnel only.
- The device must be connected to the mains power supply through a fuse that is dependent on the total line's power load.
- In case of battery replacement, this must be replaced by part of the same type, by the manufacturer or by a competent person.
- In case of inactive use for a period greater than 2 months, disconnect the battery by pulling out the battery's connector.
- The control gear is not proof against supply voltage polarity reversal.
- It is not allowed to discard batteries into common trash bins, they must be discarded only in battery recycling points. Do not incinerate.**

Connectors

CN10: Power connector
CN11: Communication Port
CN6 & CN7: Battery connector
CN9: Module Port
CNS: Non user connector
CN7: Recess LED Port

Indications LED Status


CHARGE (green)	LAMP FAULT (red)	BATT. FAULT (yellow)	Description
			Charging
			Fully charged
			Battery fault or emergency mode
			Operational test
			Light source fault
			Autonomy test
			Duration fault

Note:


	Permanently ON
	Blink
	Off
	Indifferent

Installation methods


Luminaire disassembly

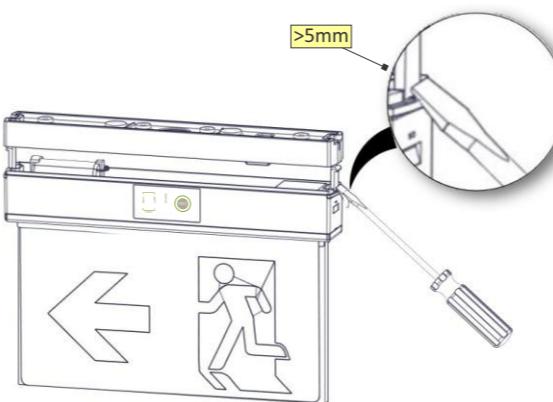


Wall mounting

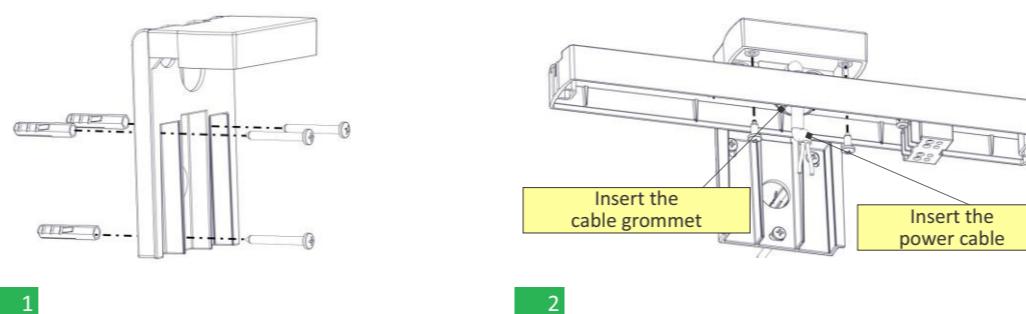


Hanging installation

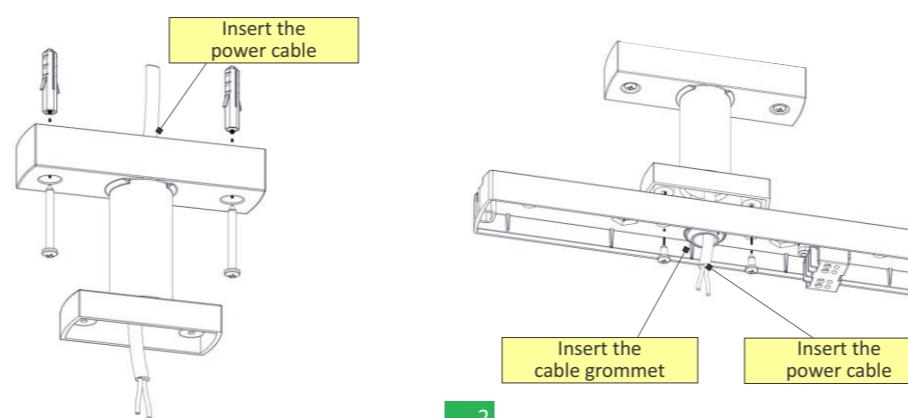


Ceiling mounting

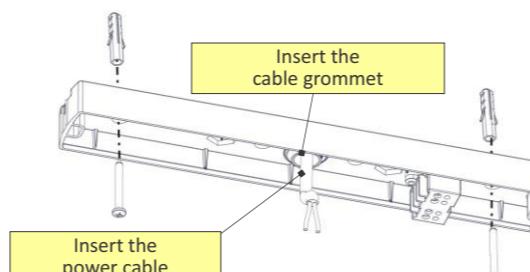

After the desired installation follow the steps below

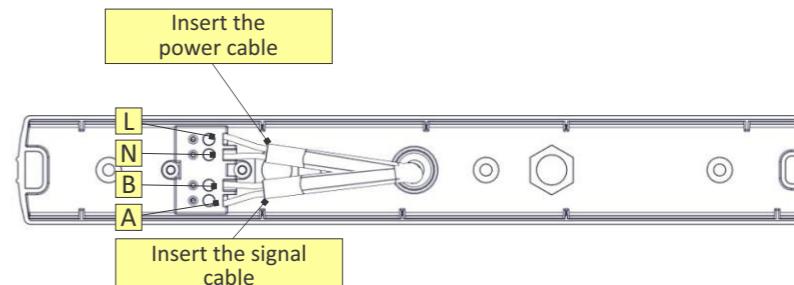


Power Connection

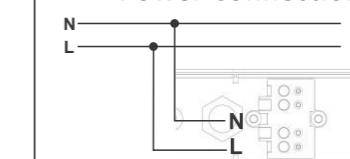

N for neutral, L for live wire

Communication Connection

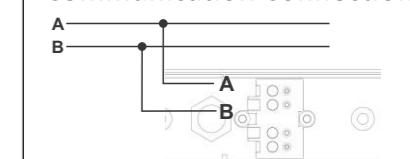

Pass the 2 signal cables and connect them on the A, B terminals minding the correct polarity. These cables are used to connect the luminaire to GR-6500 panel.

1




Maintained operation Non-maintained operation

2



1h 3h (default position) 8h

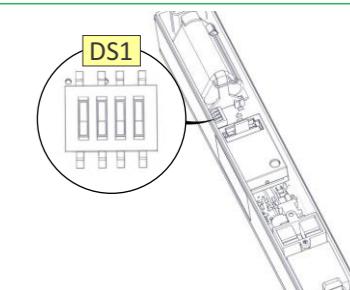

Autonomy duration selection

The user can select one of the 3 available minimum autonomy durations 1 hour, 3 hours and 8 hours. The selection must be done while the luminaire is disconnected from AC and battery supplies. The selection is achieved through Switches 2 & 3 of DS1. Switch 1 is not used.


Changing the operating mode

The control of maintained or non maintained operation of the luminaire is achieved through Switch 4 of DS1. For maintained operation, switch number 4 must be in ON position. For non-maintained operation, switch number 4 must be in OFF position.

Technical label installation


Two additional labels are included in the package, one for 1 hour duration (60) and one for 8 hour duration (480). Depending on the selected duration, the installer must cover the default 3 hour (180) printing with one label that has the required duration. Please take notice of the orientation of the label.

2

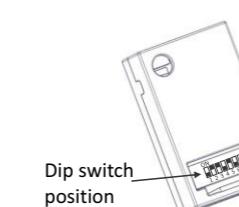


Dip switch position Set the luminaire's address through the dip switch.

3

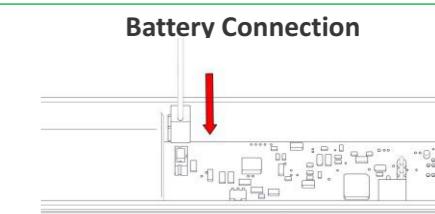

Luminaire assembly

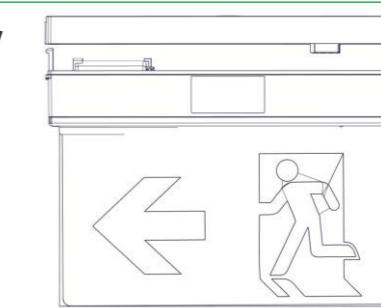

5