

## SELF TESTING NON-MAINTAINED EMERGENCY CEILING MOUNTED LUMINAIRES



### TECHNICAL CHARACTERISTICS (for LED MODULE specifications see page 5)

	GR-292/M/HL	GR-293/M/HL
OPERATION VOLTAGE	220-240V AC / 50-60Hz	
MAXIMUM POWER CONSUMPTION	4.9W / 5.2 VA	
BATTERY (NI-MH)	4.8V/4Ah	
BATTERY PROTECTION	Deep discharge and overcharge protection	
INDICATIONS - CONTROLS	Charge, lamp fault, battery fault, TEST button	
CHARGE TIME	24 hours	
MINIMUM DURATION	3 hours	
LIGHT SOURCE	1 white power LED	
EMERGENCY ILLUMINATION	330lm	
DEGREES OF COVER PROTECTION	IP20	
PRODUCED IN ACCORDANCE WITH	EN 60598-1, EN 60598-2-22, EN 55015, EN 61547, EN 61000-3-2, EN 61000-3-3	
OPERATION TEMPERATURE RANGE	5 to 40 °C	
RELATIVE HUMIDITY	Up to 95%	
CONSTRUCTION MATERIAL	ABS/PC	
EXTERNAL DIMENSION	Ø125 x 72 mm	
WEIGHT	737gr.	
GUARANTEE	3 years (1 year for the battery)	

### Thank you for your trust in our products Olympia Electronics - European manufacturer

#### GENERAL

This device is used indoors (ta 40°C) in places where emergency luminaires are needed. Each device must be permanently connected to mains power supply. The GR-292/M/HL is suitable for corridors lighting and the GR-293/M/HL for open area lighting. In normal operation the battery is charging. In case of a mains power supply failure, the device enters emergency mode and the illumination LED turns on. When the mains power supply is restored, the device turns to normal operation.

#### INSTALLATION

To install the luminaire follow the installation instructions on page 3.

#### Battery Charging

The battery charging is completely controlled. In this case, is achieved the perfect battery maintenance, as well as the elongation of its duration. When the battery has completely charged, it charges with a maintenance current.

#### Battery Cut-off

The device enters this mode when the mains power supply has failed and battery has lost its energy. During this mode the device enters in idle state and battery consumption is

negligible, in order to be protected from deep discharge.

#### Manual Test

This test can be done by pushing the test button. The light source and the emergency circuit of the device are monitored. The manual test can be conducted only if the main power supply and the battery are connected. During this test period all indication LEDs are OFF.

#### Automatic Operational Test

This test includes all the operations that provide the manual test and is conducted automatically every 15 days. In order to be performed, the mains power supply and the battery should be connected.

#### Automatic Autonomous Test

This test monitors the device's back up operation and emergency duration. The BATTERY FAULT LED blinks during the test, indicating this process to the user. This test is conducted automatically every six months. In order to be performed, the mains power supply should be connected and the battery must be fully charged. If the battery is not fully charged, the test is postponed until the battery is completely charged. If during this test, the autonomy is less than the nominal then the

battery fault led turns on continuously indicating that the battery must be replaced.

### Back Up Operation

The autonomous duration of battery during emergency mode is at least the one that is stated in the list of the technical characteristics. During emergency mode, a light source test is also performed.

### Resetting Errors

Push the Test button for >10 seconds, to delete all the indicated LED errors. Then the device enters regular operation mode.

### Test Switch

Pressing the test switch less than 5 seconds will initiate a light source test (last for 3 secs). If the test switch is pressed for more than 10 seconds, the device will be reset (delete all errors).

### ATTENTION!!!

1. Operations for installation or maintenance must be done by authorized personnel only.
2. The device must be connected to the mains power supply through a fuse dependent by the total amount of the line's power load.
3. The replacement of the battery and the light source must be done using parts of the same type, by the manufacturer or by a competent person.
4. In case of inactive use for a period greater than 2 months, disconnect the battery by pulling out the battery's connector.

5. **It is not allowed to discard batteries into common trash bins, they must be discarded only in battery recycling points. Do not incinerate.**



### Connection to module (After request)

This luminaire can be connected to any of the following modules: Remote module, address module, wireless module and fault relay module. If you connect it to a module that supports inhibit or rest mode, you should know that these commands can be cancelled only during normal mode (ie. not in emergency). For installation refer to step 2 of the installation procedure in page 3.

Also refer to the user's manual of each module for additional information.

**NOTE:** LED= Light Emitting Diode

### LABELING EXPLANATION:

**X:** Self contained

**0:** Non maintained (\*)

**A:** Including test device


**F:** Automatic test gear complying with IEC 61347-2-7 denoted EL-T

**180:** 3 hour duration

Maintained operation: The luminaire lights its illumination source, when it is powered by the mains power supply or not.

(\*) Non Maintained operation: The luminaire turns on illumination source, only in case of power supply failure.


**Note!!** If a module will be used (except the fault relay module), then the installer should fill in, on the specification label, the letters **B C**.



## Status of LEDs

LEDs	Description of indication
CHARGE	⦿: Battery charging, ○: battery charged, ○: disconnected battery
LAMP FAULT	⦿: Operation check, ○: lamp fault, ○: normal operation
BATT. FAULT	⦿: Autonomy test, ○: autonomy fault, ○: normal operation
Note	⦿: Blinking, ○: constantly on, ○: off

## INSTALLATION INSTRUCTIONS

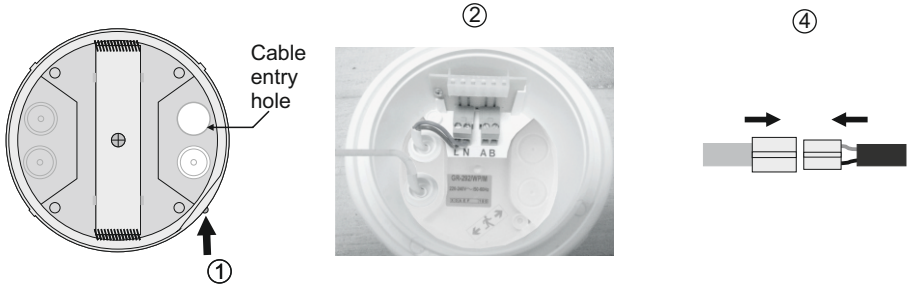

### Initial installation

- 1 Untighten the screw and pull up the reflector.
- 2 **Always use in any case round mains cable, with a diameter of 5-10mm (H05RN-F type 2x1mm<sup>2</sup> or any other type, at least equal to it's mechanical and electrical properties).** Make a hole in the center of the gasket by using a small screwdriver. Pass the round cable through the gasket. Detach the power terminal, connect the wires as shown in the picture and attach the power terminal (10A max). If you use a module (except the wireless module) pass the 2 signal cables on the A, B terminals minding the correct polarity. Depending on the module that will be used, the cables could have different names. In A, signals +L, C are also connected, while signals -L, NC/NO are connected on the terminal B.
- 3 Refit the reflector (mind the correct orientation), tighten the screw securely and the luminaire is ready for mounting.
- 4 Place the battery's connector to the corresponding connector of the luminaire.
- 5 Mount the luminaire on the ceiling.

**NOTE!!** After finishing the installation you must power the luminaire for at least 24 hours in order to completely charge the battery. The rated autonomy duration can be achieved after that time.

### Battery pack replacement.

***It can be done only by a competent person and after the mains interruption.***

1. Remove the luminaire from the suspended ceiling (figure 3 on page 4).
2. Remove the battery pack from the suspended ceiling.
3. Disconnect the connector and remove the old battery pack.
4. Connect the new battery pack (step 4 of the installation instructions) and place it in the position of the old one.
5. Place the removed parts back and power the device.

### Important notice for the installed luminaires in one area !!!

The installer must connect the battery's connector first and then should power the luminaire.

The time between batteries connection must be, at least 1.5 minute.


With this variation, it is ensured that the non synchronized Automatic Autonomous Test for two or more luminaires installed in one area, is not conducted in the same day.

### Mounting the lamp in suspended ceiling.

Set up the lamp to the suspended ceiling as it is shown bellow (Required opening 110mm):


#### Step 1

Pass the battery pack into the ceiling then bend the springs, to get into the hole of the suspended ceiling, as you can see to the next figure.

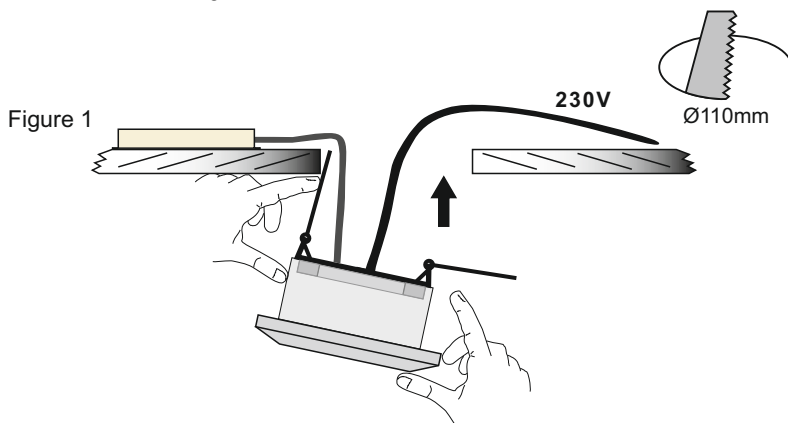


#### Step 2

Push up the luminaire, as shown in figure 2.

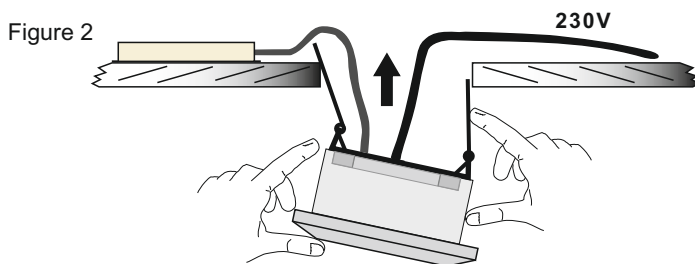

#### Step 3

Continue to push upwards until the lamp locks.

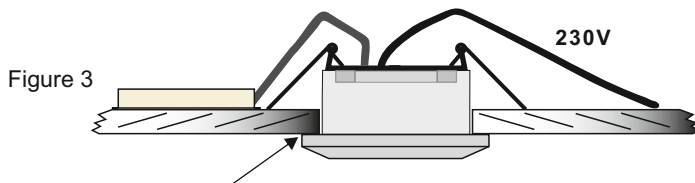

If you want to pull off the device, put a flat blade screwdriver, between the device and the ceiling.

**NOTE:** The length of the battery pack cable is 70 cm.



**CAUTION :** Do not view directly with bare eyes.



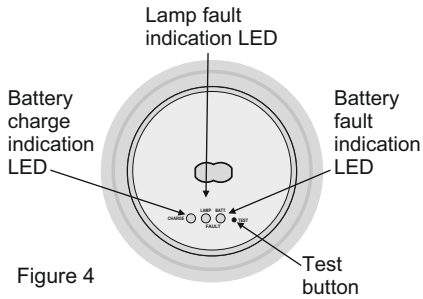


Figure 4

### GR-292/M/HL

Corridor lighting

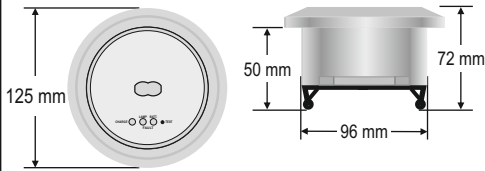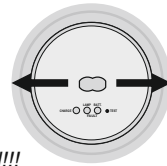


**ATTENTION!!!**  
During installation follow this light direction.

### GR-293/M/HL

Open area lighting



### A-290/BAT

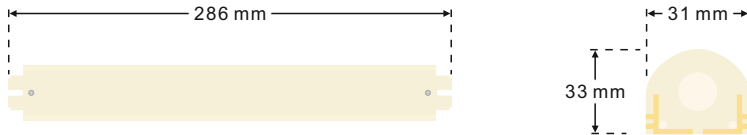

#### LED MODULE CHARACTERISTICS

	GR-292/M/HL	GR-293/M/HL
Manufacturer	Olympia Electronics S.A.	
Model Number	0405185	
Voltage Range	3-3,2V DC	
Nominal Power	2.3W	
Connections	fixed connection between main pcb and led module	
Temperature (tc)	75 °C max. across the board	



The light source contained in this luminaire shall only be replaced by the manufacturer, or his agent, or a similar qualified person.

**NOTE!** The light source is non-user replaceable.

**WARRANTY**

Olympia Electronics guarantees the quality, condition and operation of the goods. The period of warranty is specified in the official catalogue of Olympia Electronics and also in the technical leaflet, which accompanies each product. This warranty ceases to exist if the buyer does not follow the technical instructions included in official documents given by Olympia Electronics or if the buyer modifies the goods provided or has any repairs or re-setting done by a third party, unless Olympia Electronics has fully agreed to them in writing. Products that have been damaged can be returned to the premises of our company for repair or replacement, as long as the warranty period is valid.

Olympia Electronics reserves the right to repair or to replace the returned goods and to or not charge the buyer depending on the reason of defection. Olympia Electronics reserves the right to charge or not the buyer the transportation cost.

**HEAD OFFICE**

72nd km. O.N.R. Thessaloniki-Katerini  
P.C. 60300 P.O. Box 06 Eginio Pierias Greece

[www.olympia-electronics.gr](http://www.olympia-electronics.gr)

[info@olympia-electronics.gr](mailto:info@olympia-electronics.gr)